




**Plasma Powders & Systems, Inc.
Powder Jet 86 (6P Type) - Spare Part List**

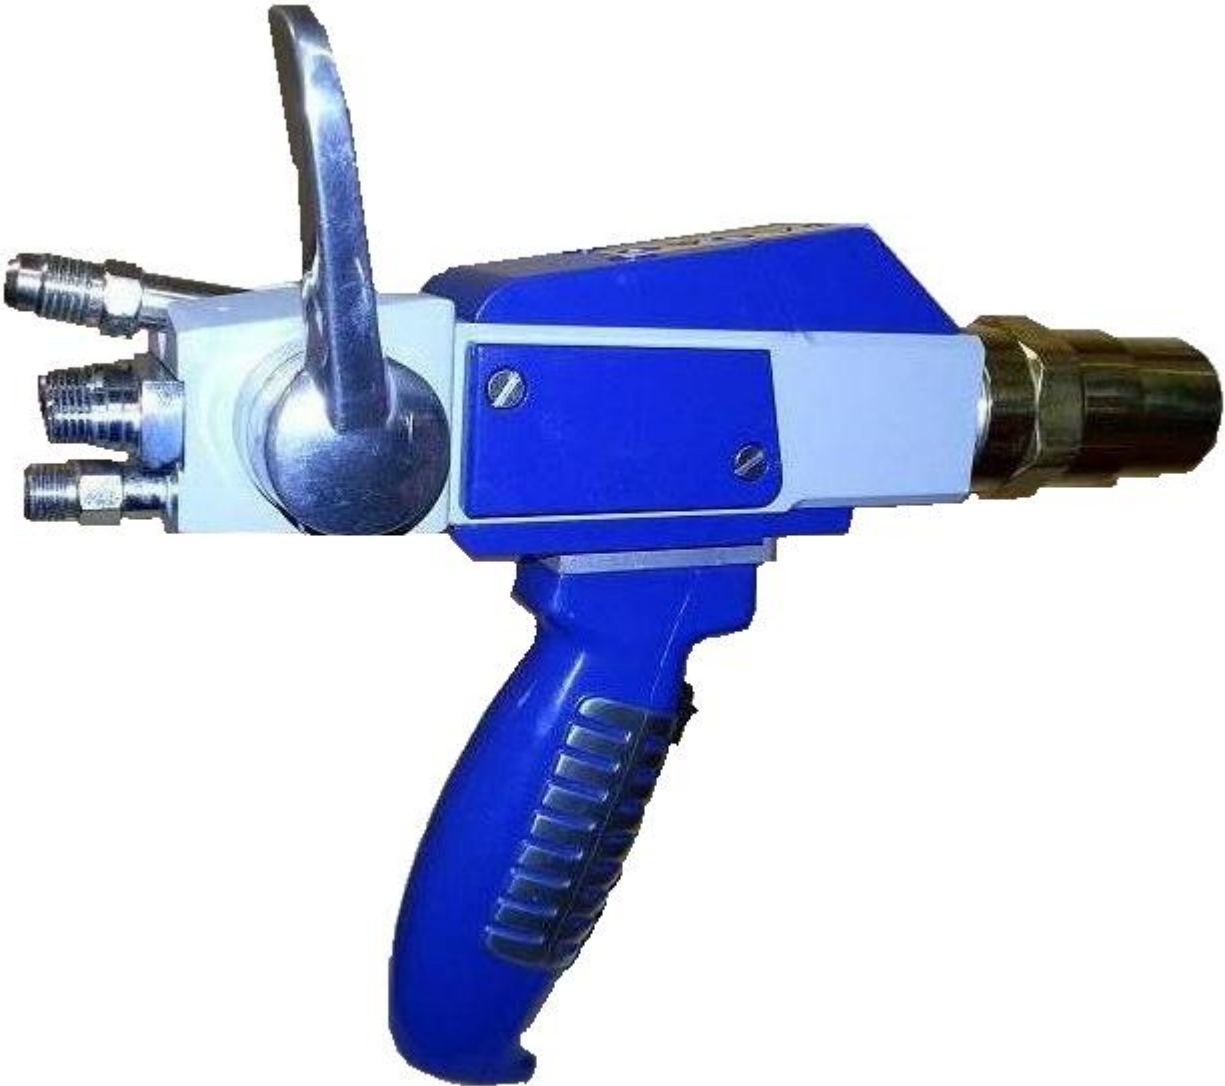

Powder Jet 86




Plasma Powders & Systems, Inc.
Powder Jet 86 (6P Type) - Spare Part List

<u>Section</u>	<u>Description</u>
1	Part List & Diagrams
	1. Siphon Plug
	2. Gas Valve Assembly
	3. Gun Body
	4. Tool Post/Lubricants
	5. 2PSA Air Jet Assembly
	6. Extensions

Section 1: Part lists


1.1 Siphon Plug:

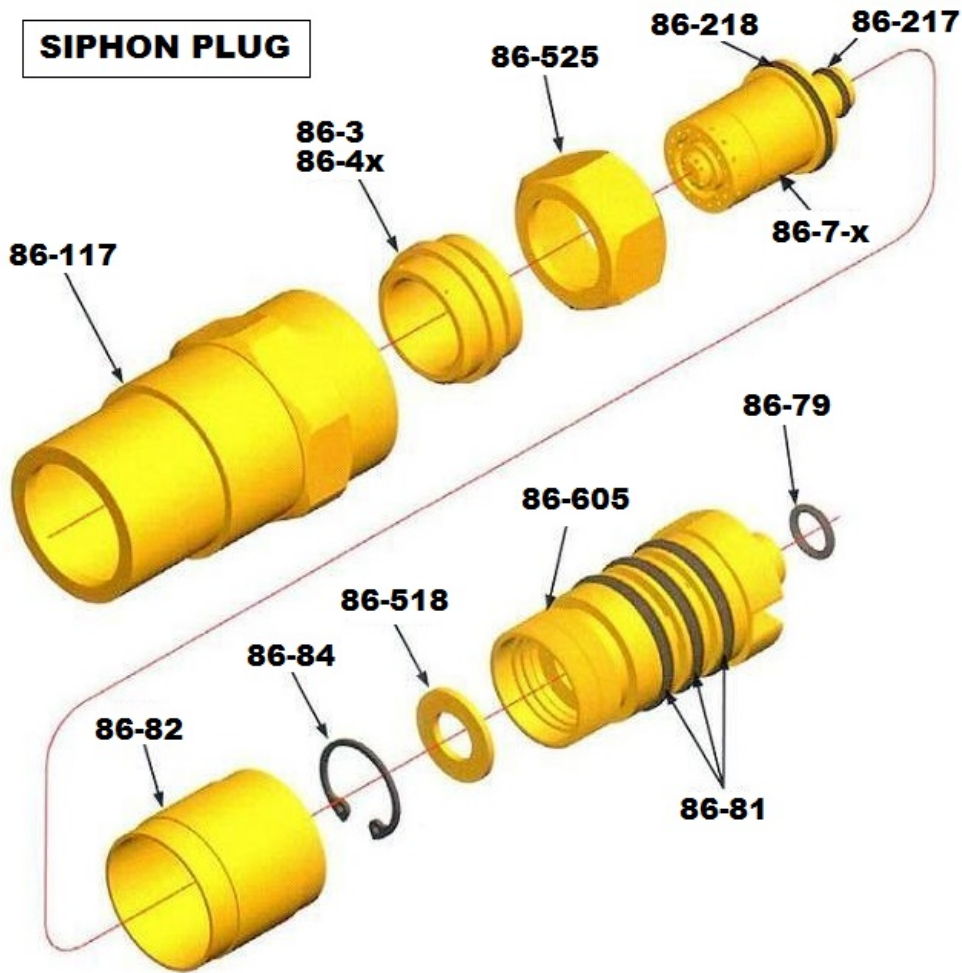

86-585 Siphon Plug Assembly

86-3	Air Cap Pinch Cool	86-117	Air Cap Body
86-7-x	Nozzle (CB,CD,CK,CM,CMH,CP)	86-217	O-Ring: Nozzle
86-79	O-Ring: Siphon Plug PK/2	86-218	O-Ring: Nozzle
86-80	O-Ring: Plunger PK/4	86-518	Baffle
86-81	O-Ring: Siphon Plug PK/3	86-525	Nozzle Nut
86-82	Sleeve	86-585	Siphon Plug Assembly
86-84	Baffle Retainer PK/5		


1.2 Gas Valve:

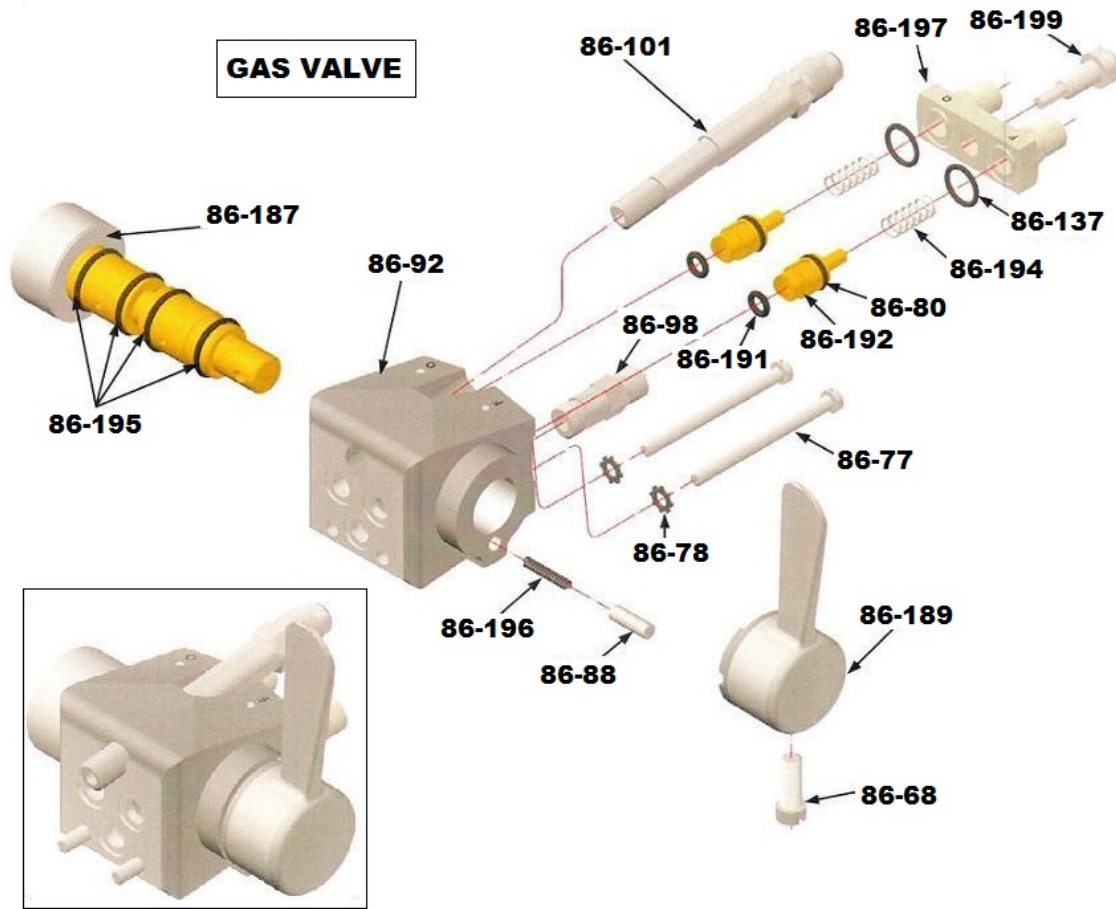

86-5 Gas Valve Assembly

86-5	Gas Valve Assembly	86-189	Valve Handle Assembly
86-68	Valve Handle Mounting Screw	86-191	O-Ring: Plunger Seal PK/2
86-77	Gas Valve Mount Screw (Long)	86-192	Plunger
86-78	Lock Washer	86-194	Plunger Spring PK/2
86-80	O-Ring: Plunger PK/4	86-195	O-Ring: Valve Core PK/6
86-92	Valve Block	86-196	Detent Pin Spring
86-96	Air Hose Connection	86-197	Hose Connection Block Assembly
86-137	O-Ring: Hose Connection Block PK/3	86-199	Conn. Block Mount Screw
86-187	Valve Core Assembly	86-101	Powder Feed Tube
86-188	Detent Pin		

1.3 Gun Body:

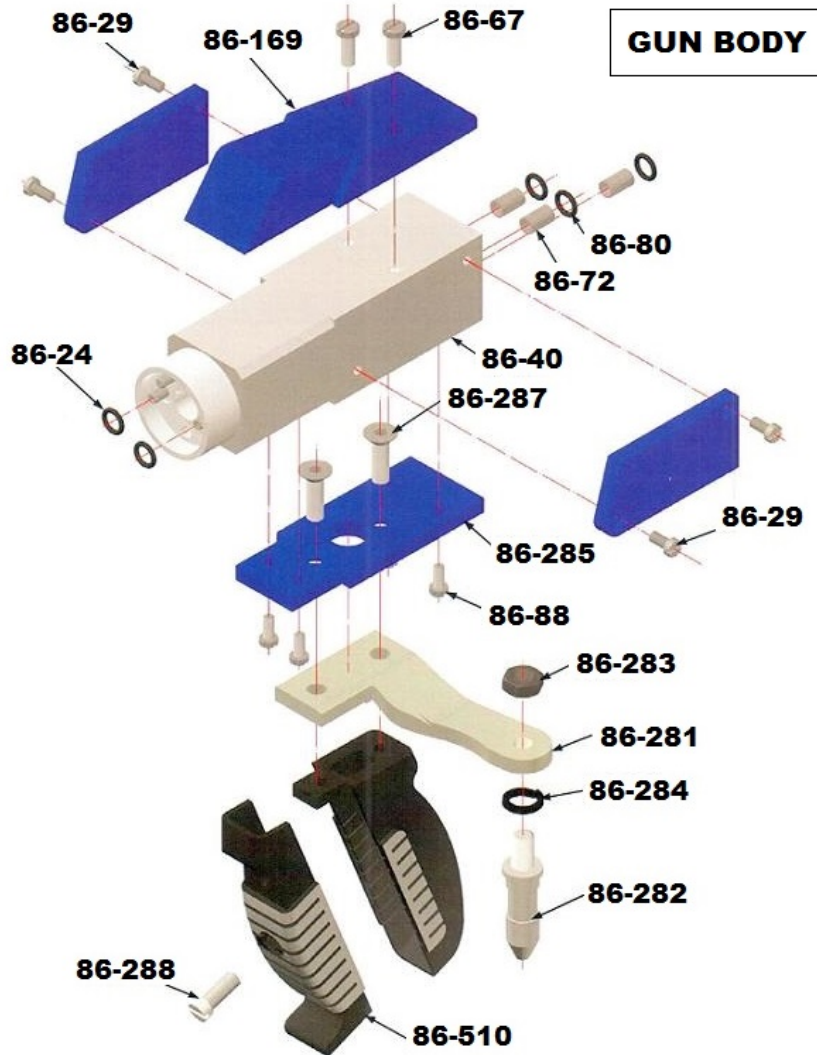

Gun Body:

86-24	O-Ring: Gas Tube PK/5	86-282	Mounting Stud
86-29	Name Plate Mounting Screw	86-283	Nut
86-40	Gun Body	86-284	Lock Washer
86-67	Top Plate Mounting Screw	86-285	Handle Mounting Plate
86-72	Gas Connection Tube	86-286	Handle Mounting Gasket
86-88	Mounting Plate Screw	86-287	Handle Mounting Screw
86-169	Top Plate	86-288	Handle Assembly Screw
86-281	Tool Post Bracket	86-510	Handle Assembly



Plasma Powders & Systems, Inc. Powder Jet 86 (6P Type) - Spare Part List

1.4 Tool Post/Tools & Lubricants



114 Wire Cleaning Kit



 
101 Spark Lighter



225 Tool Post




111 Valve Lube



119 Powder Lube

86-101	Striker
86-111	Valve Lube PK/3
86-114	Wire Cleaning Kit
86-119	Powder Lube PK/1
86-225	Tool Post


1.5 Air Jet Assembly Part List

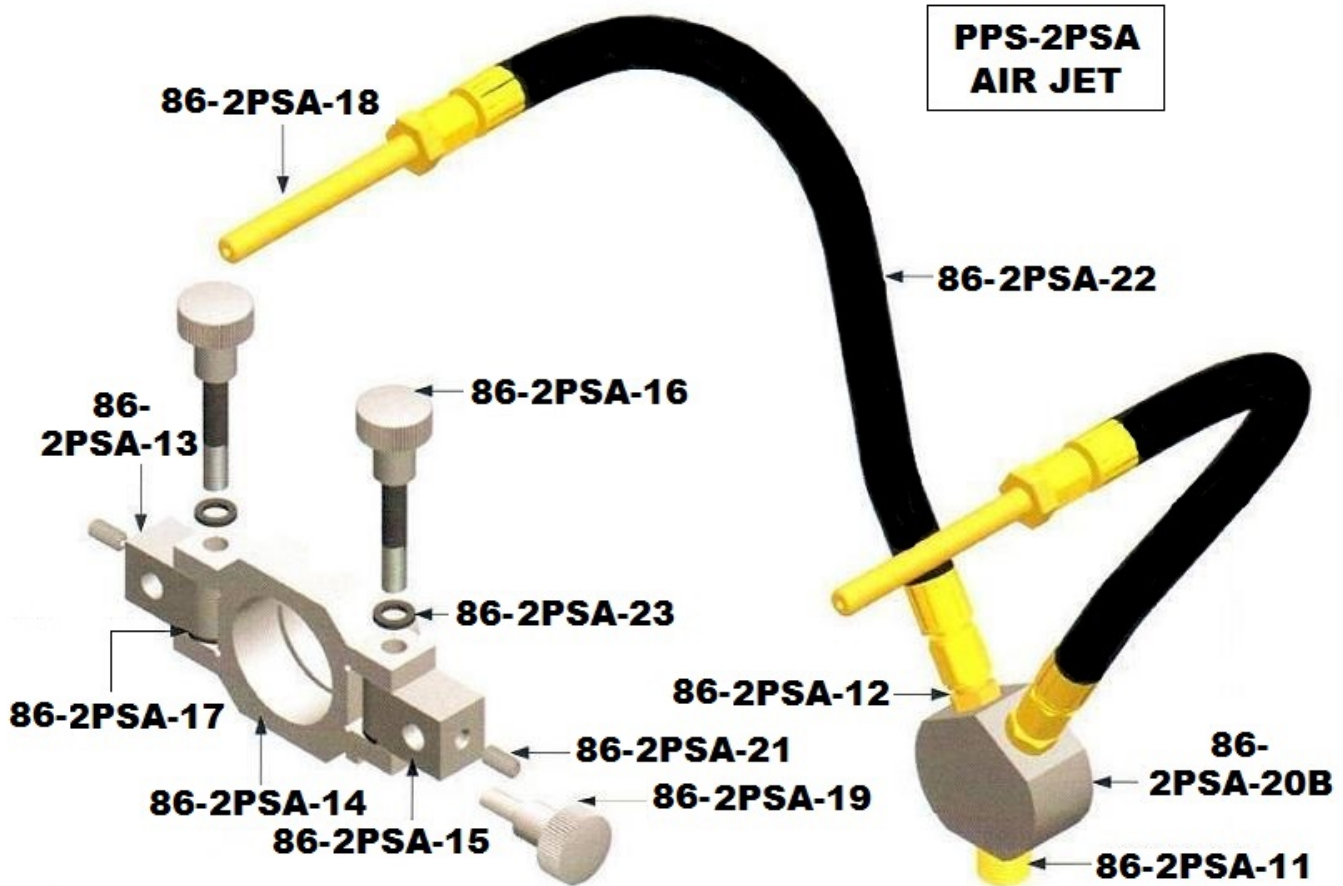

86-2PSA	Cooling Jet Assembly	86-2PSA-19	Thumb Screw
86-2PSA-11	Hose Connector (In)	86-2PSA-20	Wye (W/2psa-11 & 12)
86-2PSA-12	Hose Connector (Out)	86-2PSA-20B	Wye only
86-2PSA-13	Pivot Block – Right	86-2PSA-21	Set Screw
86-2PSA-14	Air Jet Head	86-2PSA-22	Air Nozzle Hose
86-2PSA-15	Pivot Block – Left	86-2PSA-23	Clamp Screw Washer
86-2PSA-16	Pivot Block Clamp Screw	86-2PSA-24	Air Hose (15Ft) Not Shown
86-2PSA-17	Clamp Nut	86-2PSA-25	Allen Wrench (Not Shown)
86-2PSA-18	Air Nozzle		

1.6 Extensions

86-EXT-1 PowderJet 86 Extension

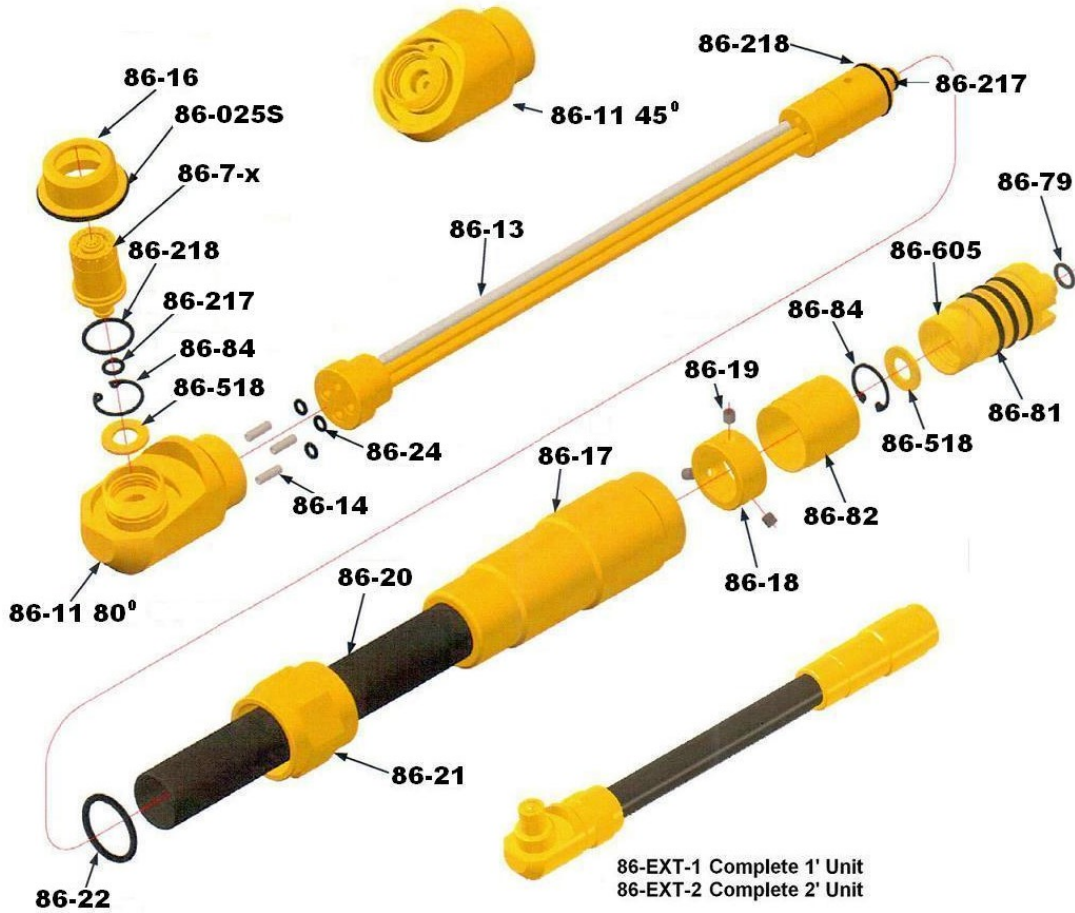

Extension:

86-EXT-1	Complete 1 Foot Unit	86-19	Set Screws (5/Pk)
86-EXT-2	Complete 2 Foot Unit	86-20-1	Air Tube (1 Foot)
86-025S	O-Ring: Nozzle Nut	86-20-2	Air Tube (2 Foot)
86-7-x	Nozzle (CB,CD,CK,CM,CMH,CP)	86-21	Air Tube Connecting Nut
86-11-45	45° Gas Head	86-22	O-Ring: Air Tube (1/Pk)
86-11-80	80° Gas Head	86-24	O-Ring: Sleeve (3/Pk)
86-11-90	90° Gas Head	86-79	O-Ring: Siphon Plug (2/Pk)
86-13-1	Gas Tube (1 Foot)	86-81	O-Ring: Siphon Plug (3/Pk)
86-13-2	Gas Tube (2 Foot)	86-82	Sleeve
86-14	Gas Connecting Sleeve (1/Pk)	86-84	Retaining Ring
86-16	Nozzle Nut	86-217	O-Ring: Nozzle Small
86-17	Air Cap Body	86-218	O-Ring: Nozzle Large
86-18	Locking Ring	86-518	Baffle



**Plasma Powders & Systems, Inc.
Powder Jet 86 (6P Type) - Spare Part List**

This publication could include technical inaccuracies or typographical errors. Changes may be made to the information herein. These changes will be incorporated in later editions of the manual. Persons and organizations that may already possess the equipment and or a copy of this manual are responsible to request periodic updates of this document in writing from Plasma Powders & Systems, Inc. at the address indicated below.

Plasma Powders & Systems Inc.
38 Adamson Street
Easton, PA 18042
732-431-0992
Email – info@plasmapowders.com
Web – www.plasmapowders.com